



# Fujifilm FinePix XP80 LCD Screen Replacement

A malfunctioning LCD screen, whether it simply won't turn on, dead pixels, or some other issue, is a major inconvenience. Use this guide to get it working properly again.

Written By: Daniela Pesci





## TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Open the side panel, housing the battery compartment, by pressing the center button down and twisting the dial.

## Step 2



- Release the battery from its secured position by pulling the orange tab back. The battery can then be removed from its compartment.



## Step 3 — Exterior Case



- Locate and remove the screws (2mm, 5 each) on the bottom of the camera, using PH000 Phillip hex head bit.

## Step 4




- Located and remove the screws (2mm, 2 each) from the top of the camera, using H1.3 hex head bit.

## Step 5



- Locate and remove the screws (2mm, 2 each) on the side of the camera, using H1.3 hex head bit.

## Step 6

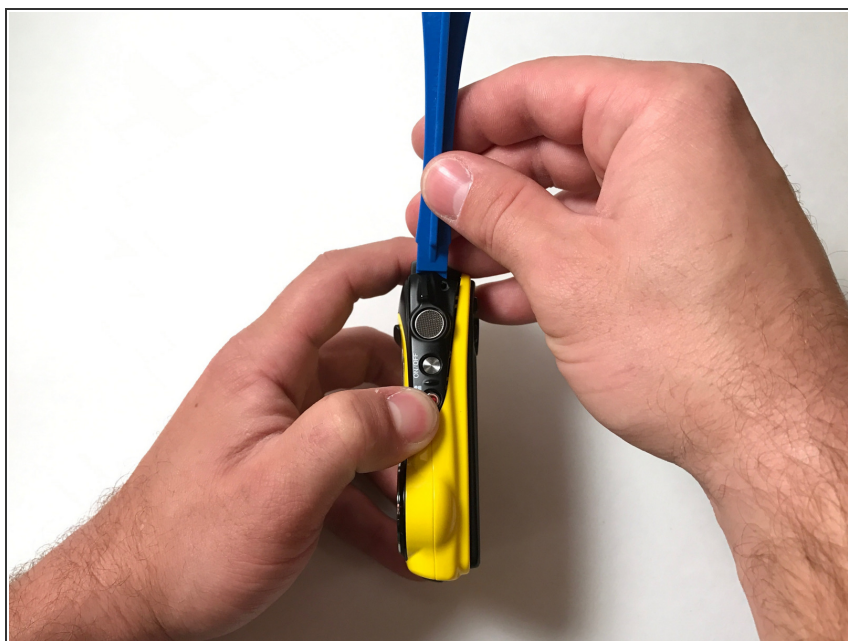

- Using a plastic opening tool, gently start to pry the button case, located at the top of the camera, so it unclips.

## Step 7



- Continue to the side of the camera to gently pry the side area of the case apart.

## Step 8



- Continue to the bottom of the camera and gently pry the case apart.



## Step 9



- It is now safe to remove the yellow front panel. While using your plastic opening tool, gently pry the front panel away from the camera.
- Once the front is removed, the yellow back panel can be taken off with just your hands.

## Step 10 — Interior Case



- On the front of the camera, using the H1.3 hex head bit, remove the four screws shown.

## Step 11



- Continue to the back of the camera, using the H1.3 hex head bit, and remove the screw shown.

## Step 12



- Open the side of the camera, where the battery is housed.
- Using your plastic tool, carefully pry the two clips shown to separate the case.




## Step 13




- Unclip the front interior panel from the top, bottom and side of the camera.

## Step 14

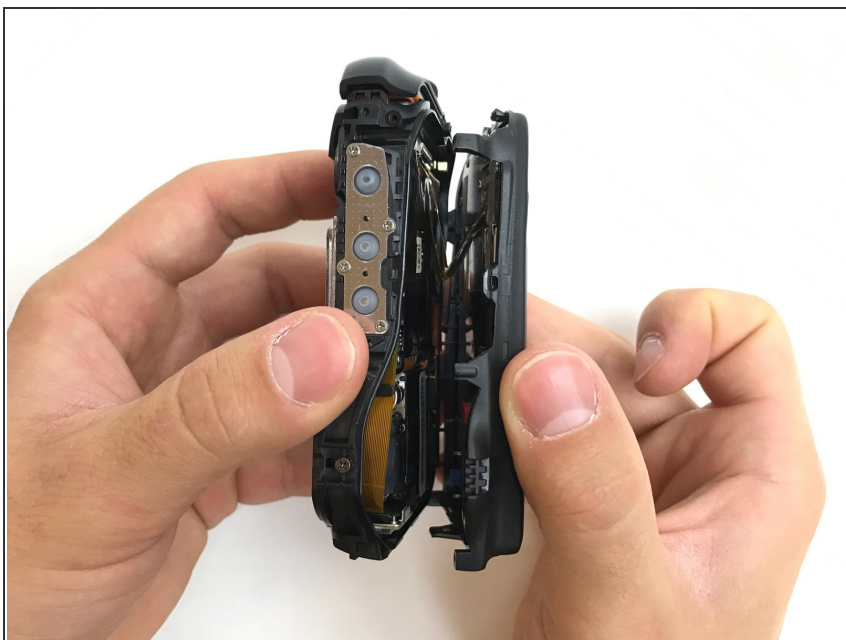


- Gently open the camera, taking care of the major data lines connecting the motherboard to the LCD screen.

## Step 15 — LCD Screen

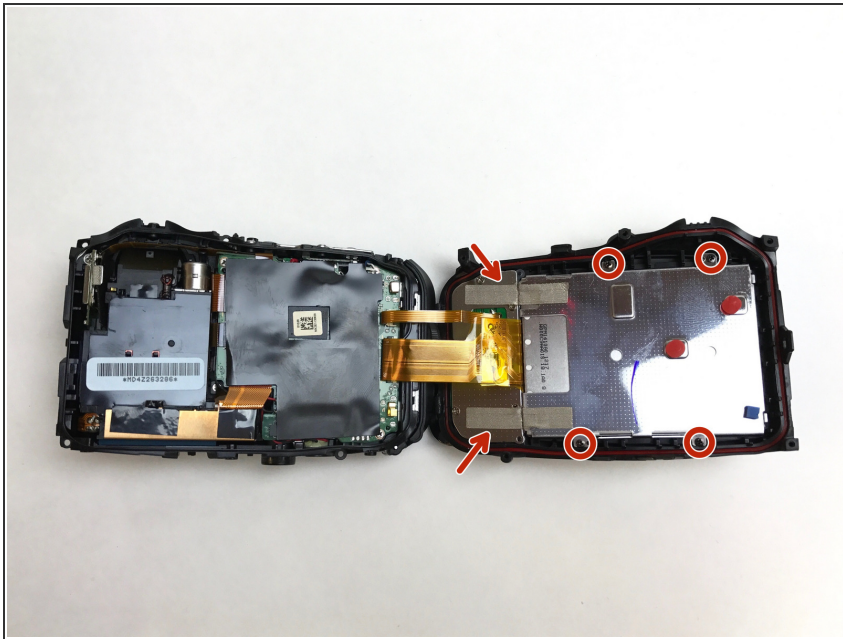


- Once you expose the inside of the camera, use the PH000 Phillips head bit and remove the four screws as shown.
- Carefully remove the tape binding the screen to the camera (indicated by arrows in the image).

## Step 16

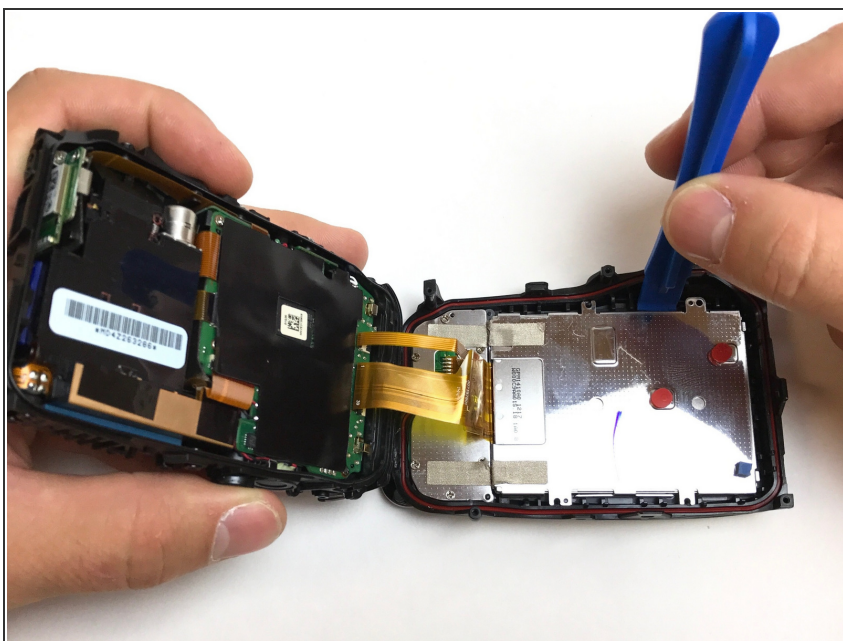

- Gently pry the LCD screen from the case, using a plastic opening tool.

## Step 17

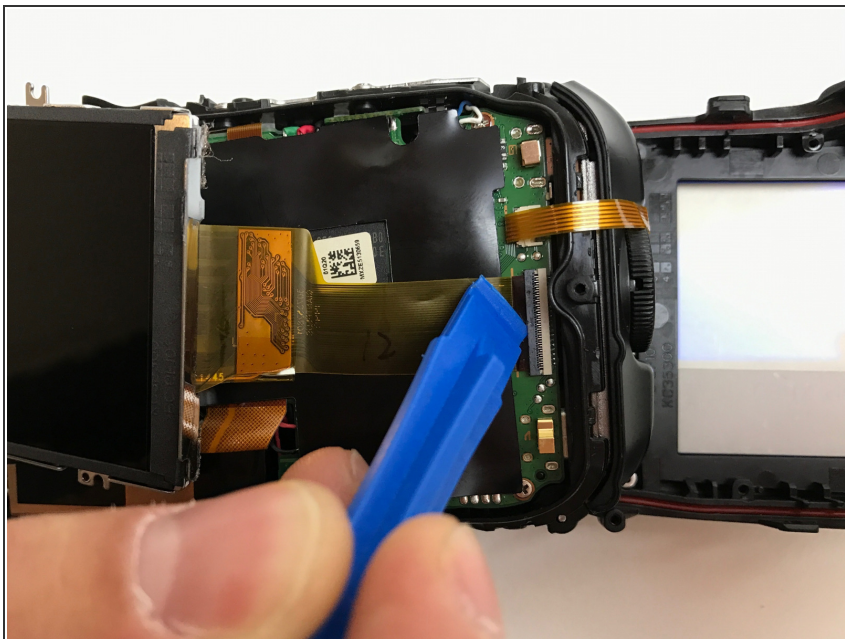

- Unclip the LCD data line from the mother board, using the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 08:04:58 PM.